


TerraManager Installation

Last updated 13/12/24

Step 1


Install the TerraManager software on the machine where it will be used. This is important because the license will be tied to the network card. Once installed, open the software.

Click the cog symbol in the top-right corner.

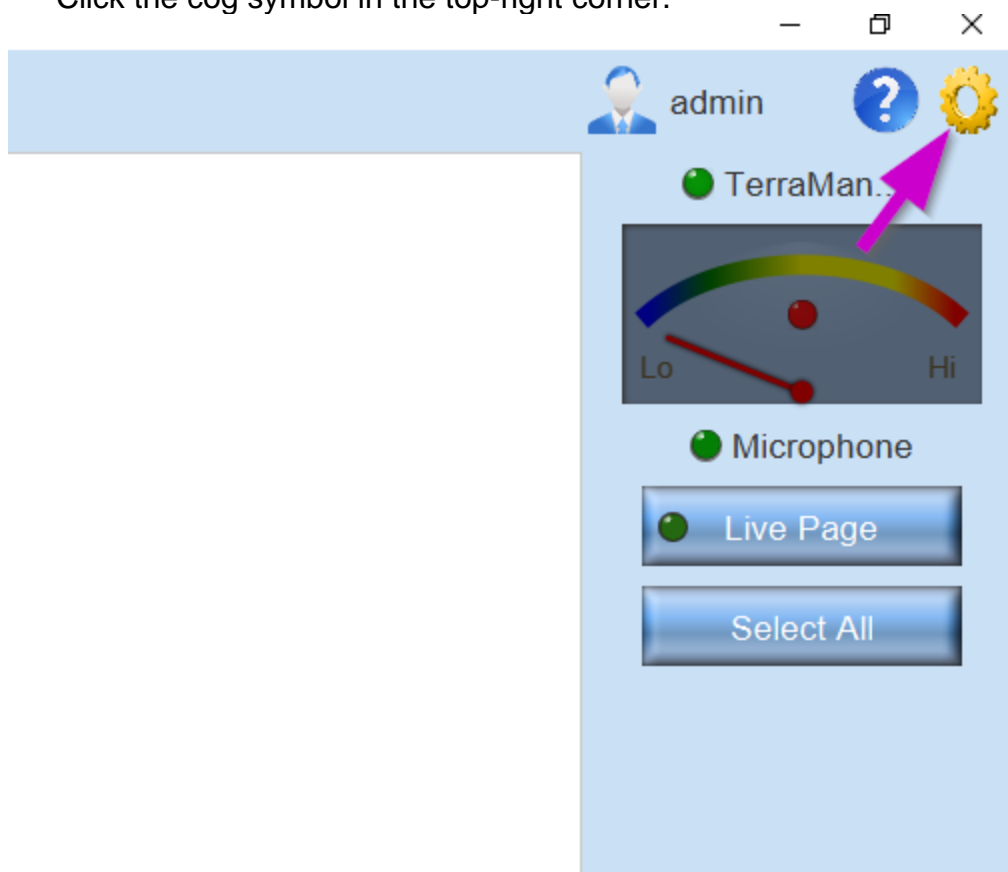


Step 2

Select *Options* from the dropdown menu in the top-left corner.

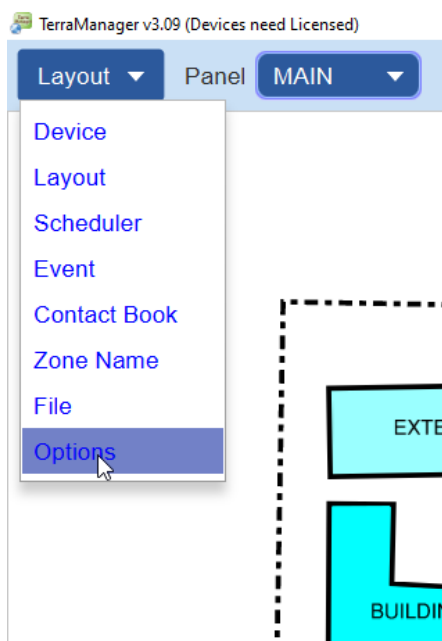


Step 3

In the License tab, ensure that the correct Network Interface is selected. Then, click *Get License* and *Export Request*.

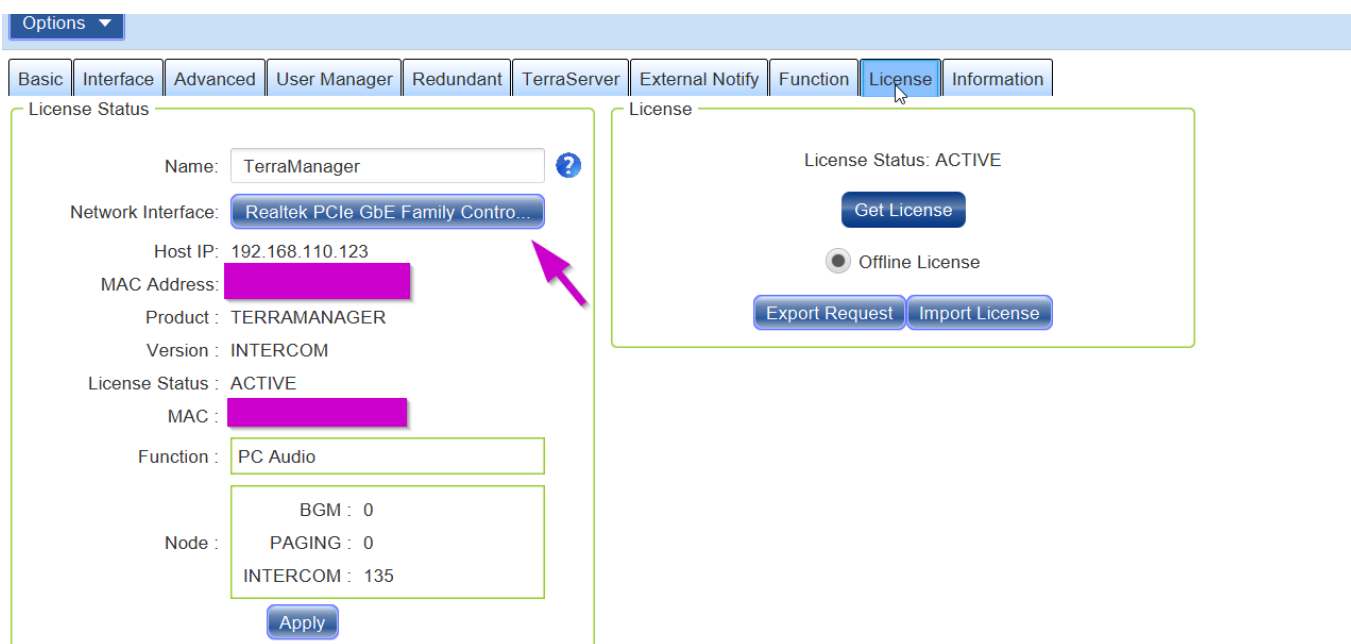

Step 4

In the popup window, select *Version: INTERCOM*.

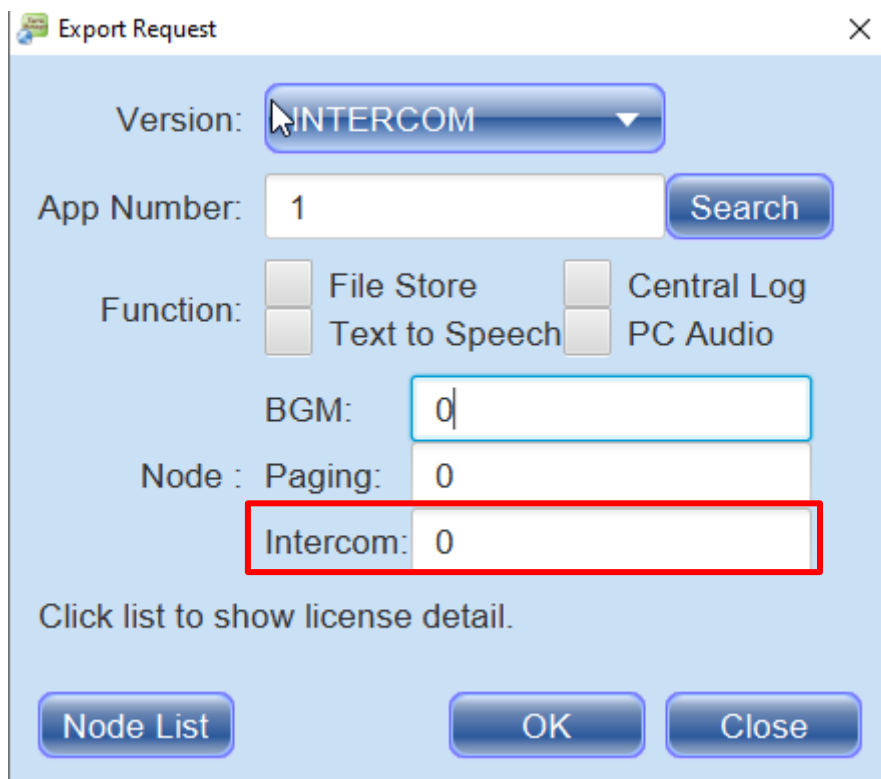

Export Request

Version: **INTERCOM**

App Number: 1 **Search**

Function: File Store Central Log
 Text to Speech PC Audio

BGM: q

Node : Paging: 0

Intercom: 0

Click list to show license detail.

Node List **OK** **Close**

Set the number of Intercom nodes to match the total number of IP devices in the system (e.g., IP speakers, door stations, and microphones). Note that passive speakers are not included.

This will generate a license request file that you can send to us. We will provide the software license file within 48 hours.

Once you receive the confirmed license file, load it into the TerraManager software and apply the configuration file.