


LOUDSPEAKER VOLUME CONTROL

VCT25R



INSTALLATION INSTRUCTIONS


STEP 1

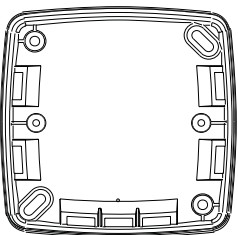

Back cover/
box


Fit surface back cover/box to required position. A recessed Installation will require an "MK" type junction box min depth 47mm. "MK" type back box, not supplied.

STEP 4

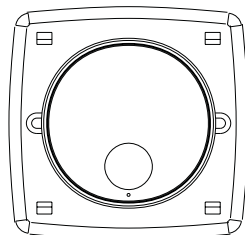

Front plate and knob

Pull off / remove the attenuator knob and keep to one side.

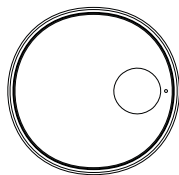

Knob

STEP 2

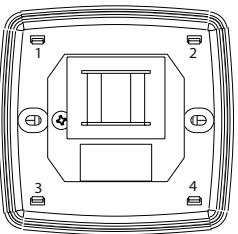


Plate with the PCB mounted (back view)

Unclip front cover at 4 fixing points.

STEP 5


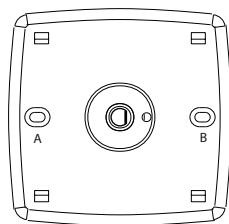


Plate with the PCB mounted (front view)

Wire the volume control as circuit diagram and then fix plate to back box via fixing holes "A & B". Re-fit Knob and front plate to complete install.


STEP 3

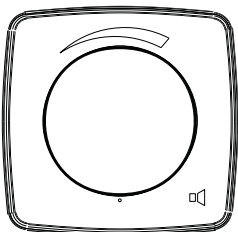

Front cover


Cover removed keep to one side.

VCT25R Volume Control 25 watt + Restoration Relay Remove Terminal Strip to Wire

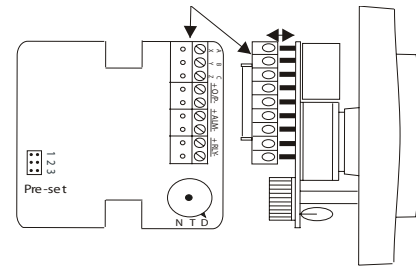


TWO WIRE RELAY CONTROLLED RESTORATION

1. Set function selector to "N", pre-set restoration sound level (1=0 ,2=-3 ,3=-6dB).
2. Connect amplifier output to A or X and B or Y, 24 Vdc to "-RLY+" as shown on the diagram.

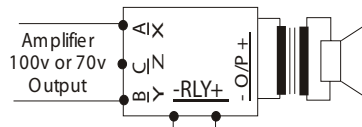


TRI-WIRE RESTORATION VIA REMOTE RELAY

 1. Set function selector to "T".
2. Connect amplifier output to A or X, C or Z and B or Y as shown on the diagram.



DUAL AMPLIFIER SOUND RESTORATION

1. Set function selector to "D".
2. Connect program amplifier output to A or X and B or Y, paging amplifier to "-ALM+", 24 Vdc to "-RLY+" as shown on the diagram.

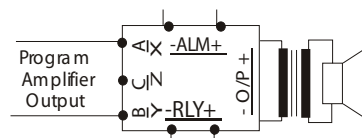

Penton UK Ltd

Unit 2 Teville Industrials | Dominion Way | Worthing | West Sussex | BN14 8NW

T: +44 (0)1903 215315 | F: +44(0)1903 215415 | E: SALES@PENTONUK.CO.UK

www.pentonuk.co.uk

ISSUE MAY 2010