

PRO-SOUND CEILING LOUDSPEAKER

CCS4/T

The Bassreflex ceiling mount loudspeaker consists of a low-frequency chassis and an additional high-frequency driver.

The closed back allows for a bass reflex construction, which is reflected in the excellent reproduction of music. Atypical for 100V speakers is the extremely high sound reproduction and the balanced sound picture, which impresses with the first hearing.

Wherever powerful basses and clear heights are required to create the right atmosphere, this speaker is the first choice.

The performance can be adjusted without great effort with a selector switch below the front grille.



• Electrical	
Rated power, watts	30
Tappings 100 volt line, watts	30/15/7.5/3.75
Transformer Impedance, ohms 100V	330/660/1.32k/2.64k
Tappings 70.7 volt line, watts	15/7.5/3.75/1.875
Driver impedance, ohms	16
Effective Frequency Range, Hz (BSEN60268-5)	65-19.500
S.P.L. @ 1m, 1watt, dB, test signal bandwidth 100Hz - 10kHz	86
S.P.L. Full power, octave bandwidth, dB	101
Acoustic power (dB-PWL @ 1 watt) 1k/2k Hz, dB	86/88
Dispersion at 1k/2k Hz, Degrees	180/160
Directivity axial Q factor, 1k/2k Hz	2.4/4.5
Environmental	
IP-rating	n/a
Min/Max amb temp	-10°C to 55°C
Relative humidity	≤65%
Mechanical	
Dimensions, front and depth, mm	195.50x206.74
Net weight, kg	2.5
Colour/Finish	White
Material	Plastic Baffle ABS with UV Inhibitors
Cut-out, mm	Ø168
Mounting	Rotary Compression Clamp. Mounting Baffle available on request




Penton UK Ltd

31 Oakhurst Business Park | Wilberforce Way | Southwater | West Sussex | RHI3 9RT T: +44 (0)1903 215315 | E: SALES@PENTONUK.CO.UK


шшш.penton.audio




INSTALLATION GUIDE CCS4/T

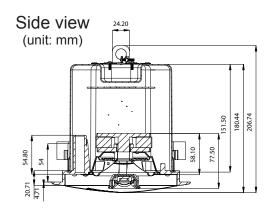


Side view (unit: mm)

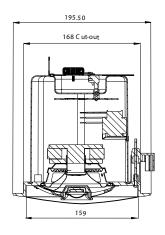


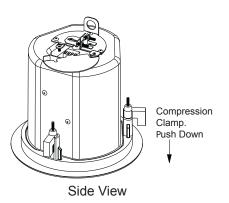

1) Cut a hole in the ceiling 168mm diameter

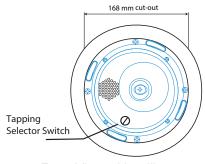

Front View with grille removed

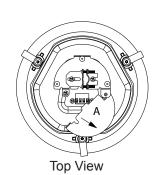


2) Remove the metal grille from the front of the loudspeaker by pushing all the rotary compression clamps down towards the grille


3) Once the grille has been removed connect the 100 volt line input cable via the terminal block secured under the rotating cover shown below "A". To select the required wattage output use the tapping selector switch shown in the above drawing.

This unit is also avaliable in low impedance (16 ohms) Model CCS4 and will be connected as above (the unit will be manufactured minus the 100 volt line transformer)

4) The loudspeaker is ready to be pushed up into the cutout prepared earlier. Ensure that all compression clamps are fully extended to allow for the ceiling thickness. Once the loudspeaker is in position use a cross headed screwdriver and turning it in a clockwise motion you will observe that the clamps will pull down and lock the loudspeaker into position.

5) On mounting the speaker replace the snap fit grille.



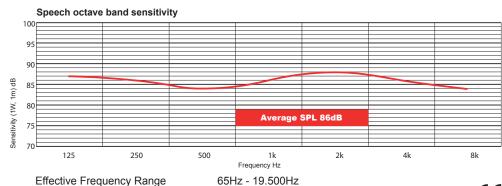

 $\label{lem:Disclaimer: We reserve the right of changes and errors. \\$

CE



Penton UK Ltd

3I Oakhurst Business Park | Wilberforce Way | Southwater | West Sussex | RHI3 9RT T: +44 (0)1903 215315 | E: SALES@PENTONUK.CO.UK

WWW.penton.audio